

CLUTCH ASSEMBLY

KEY	PARTS NUMBER	PCS	PARTS NAME	KEY	PARTS NUMBER	PCS	PARTS NAME
1	LB-05-613	2	COVER	31	LB-05-301	2	BOWED WASHER
2	NH08NF	2	NUT	32	LB-05-310	2	CLUTCH DISC
3	LB-05-611	2	PRESSURE SLEEVE	33	LB-05-305	4	BRAKE PLATE
4	LB-05-612	2	ADJUSTING BOLT	34	LB-05-307	1	CLUTCH SHAFT
5	LB-05-610	2	PLUG	35	LB-05-329	1	CLUTCH BUSHING
6	LT-05-601	2	CLUTCH CAM				
7	NH08NF	2	NUT				
8	LB-05-609	2	BEARING SPACER				
9	LB-05-608	2	SPRING				
10	LB-05-602	1	CLUTCH BODY				
11	LB-05-605	2	SPRING SEAT				
12	ORP28	2	O RING				
13	LB-05-615	2	HANDLE				
14	LB-05-616	2	KNOB				
15	ORP14	2	O RING				
16	BB6292RS	2	BALL BEARING				
17	LB-05-607	2	WASHER				
18	RCS09	2	SNAP RING				
19	LB-05-603	1	PLUNGER				
20	LB-05-604	2	SPRING				
21	LB-05-606	2	NUT				
22	LB-05-614	2	STOP SCREW				
23	LB-05-306	1	CLUTCH BUSHING				
24	RCS06	6	SNAP RING				
25	LB-05-308A	2	CLUTCH FIXED PLATE				
26	LB-05-328	1	CLUTCH SHAFT				
27	LB-05-308B	2	OILITE BEARING				
28	RCS35	2	SNAP RING				
29	BP5202NR	2	BEARING				
30	LB-05-308	1	PINION				

